



EZ-NICHES® from *Alpinebay* is the solution to the costly and long process of building a recessed niche. The prefabricated design is ready to tile and can easily be installed in minutes.

Constructed from recycled ABS, this lightweight and durable material is virtually indestructible. A tiled shower niche creates an attractive shelf to place your shower necessities. In addition, the niche is often used as a design focal point for decorative tiles. Get creative and use multiple sizes.


FEATURES

- Easy and Quick Installation
 - Ready for Tile
 - Will **Not** Mold, Mildew, Rust or Leak
 - Strong Bond with Polymer Modified Thin-set Mortar
- Install Vertically or Horizontally
 - Adjustable Dividers/Shelf Available
 - Fits Standard Wall Framing
 - Limited Lifetime Warranty

EZ-NICHES® SIZE OPTIONS


Measurements: Width x Height x Depth

*Optional Adjustable Dividers for selected sizes
**Arches Available: 14" x 22", and 14" x 14"

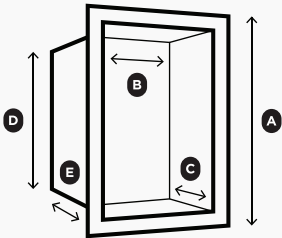


- A) OUTSIDE
- B) INSIDE
- C) INSIDE DEPTH
- D) ROUGH-IN
- E) OUTSIDE DEPTH

EZ-NICHES® SIZE OPTIONS (CONT.)

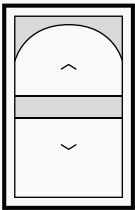


14" x 22" #LRN
LARGE RECTANGULAR NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	17-1/4"	25-1/4"	3-3/4"
INSIDE	14"	22"	3-5/8"
ROUGH-IN	14-1/4"	22-1/4"	3-3/4"




11" x 16" #MRN
MEDIUM RECTANGULAR NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	14-1/4"	19-1/4"	3-3/4"
INSIDE	11-1/4"	16-1/4"	3-5/8"
ROUGH-IN	11-1/2"	16-1/2"	3-3/4"

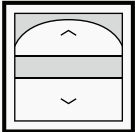

14" x 14" #LSN
LARGE SQUARE NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	17-1/4"	17-1/4"	3-3/4"
INSIDE	14"	14"	3-5/8"
ROUGH-IN	14-1/4"	14-1/4"	3-3/4"




8" x 14" #SRN
SMALL RECTANGULAR NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	11-1/4"	16-3/4"	3-3/4"
INSIDE	8"	13-1/2"	3-5/8"
ROUGH-IN	8-1/4"	13-3/4"	3-3/4"




7" x 8" #SN
SMALL NICHE/FOOTREST

	WIDTH	HEIGHT	DEPTH
OUTSIDE	10-1/4"	11-1/4"	3-3/4"
INSIDE	6-3/4"	7-7/8"	3-5/8"
ROUGH-IN	7"	8-1/4"	3-3/4"

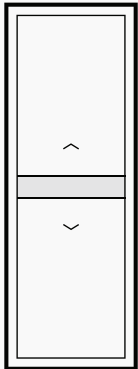

14" x 36" #EZ-XXLRN
EXTRA EXTRA LARGE RECTANGULAR NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	39"	14-1/2"	3-3/4"
INSIDE	35-1/2"	14"	3-5/8"
ROUGH-IN	35-3/4"	14-1/4"	3-3/4"

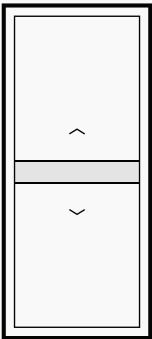

16" x 32" #EZ-XLRN
EXTRA LARGE RECTANGULAR NICHE

	WIDTH	HEIGHT	DEPTH
OUTSIDE	35-5/8"	19-1/2"	3-3/4"
INSIDE	32-3/8"	16-1/2"	3-5/8"
ROUGH-IN	32-1/4"	16-1/4"	3-3/4"


ACCESSORIES




1 INCH DIVIDER



2 INCH DIVIDER



GLASS DIVIDER



FROSTED GLASS DIVIDER



ARCHES





ALPINEBAY, INC.

1668 El Pinal Drive,
Stockton, CA
95205, USA

ez niches® info@ez-niches.com

HOURS

Weekdays
8 am – 3 pm PST

**U.S. & CANADA
TOLL FREE**

+ 1 800 399 6088

PHONE

+ 1 209 462 1818

FAX

+ 1 209 462 8888

DISTRIBUTED BY:



For further information, or to find a dealer near you,
visit our website:

EZ-NICHES.COM | ALPINEBAY.COM

PATENTED D676,534

ALL YOU NEED TO INSTALL YOUR EZ-NICHES®

ADHESIVES

- Polymer Modified Thin-set Mortar
- Silicone Adhesive Caulking

Note: Follow manufacturing setting time for thin-set mortar. Allow longer setting time for larger size tile.


RECOMMENDED TOOLS

- Pencil/Markers
- Wall Trowels
- Screws
- Utility Saw/Knife
- Leveling Tool



STEP 1

Trace the rough-in size around the entire niche. Allow an additional 1/8" to allow room for adjustments.

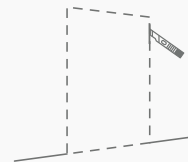


STEP 2

Cut out substrate from traced lines. Avoid cutting framing members, water lines, electrical wires, etc.



STEP 3

Place your niche into the cut out substrate to ensure fitting. Use a leveling tool to ensure correct alignment.

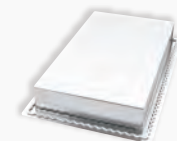

STEP 4

Apply a continuous bead of silicone adhesive caulking on the back of the mounting flange.



STEP 5

Secure your niche into the wall with fasteners.



STEP 6

Skim a coat of polymer modified thin-set mortar around the edge of the niche to "feather" out the flange to the substrate.



STEP 7

Apply thin-set to the niche and back butter tile with polymer modified thin-set mortar to ensure full contact. Allow a longer setting time for tile to adhere to the surface.



DIVIDER/SHELF & (LRN/MRN) ARCH INSTALLATION

Apply silicone adhesive caulking on the back of the divider/arch to adhere into place.



(LSN) ARCH INSTALL

Use a sharp cutting tool to score the excess edge of the arch and snap off the excess piece.

ez niches®

INSTALL NICHES IN MINUTES

