


Assembly and Operating Instructions **RMX** Mixer Stand



Collomix Rühr- und Mischgeräte GmbH
Daimlerstr. 9
85080 Gaimersheim
Germany
www.collomix.com




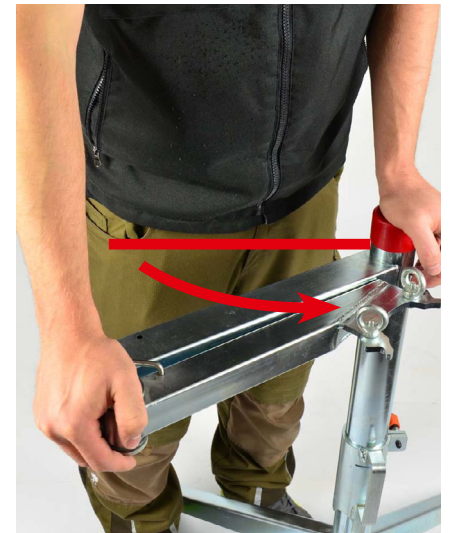


Hold the round pipe in the depressed position and swivel the square pipe to the side. When the release is actuated, the spring force will press the swivel arm upwards.



CAUTION: The pipe will be pushed up suddenly by the spring force - beware of injury!

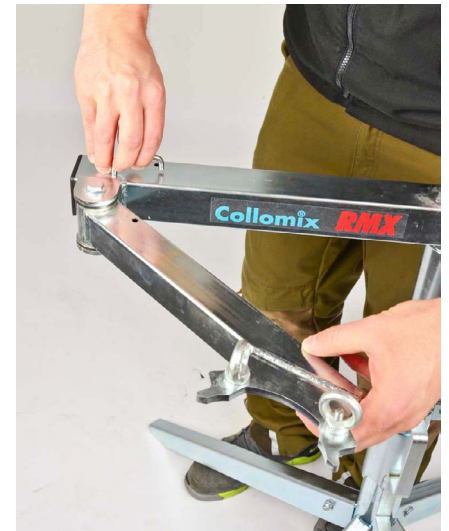

Hang the Xo mixer by its two holes into the mount.

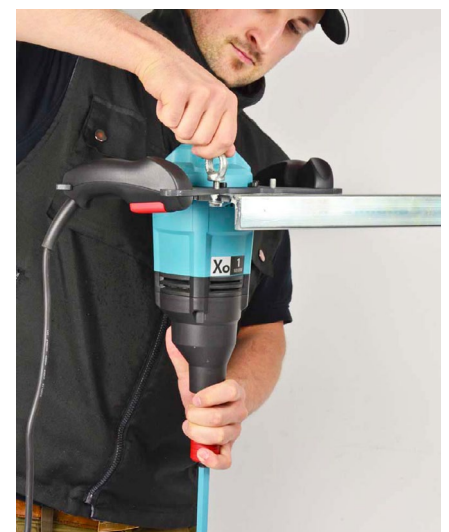



Secure the mixer firmly with the screws; if necessary use a tool to tighten the screws



For mixing: push the machine into the material and move to all sides.
To support while starting, press the tube with your second hand downwards to get the mixer lowered easily



The machine cannot be operated on its own with the RMX.